

Vat Mixer Assembly Manual



Mixer Controller Assembly



Pivot Mount




Mixer Controller


Remove nuts
on bottom of
mixer
controller and
affix to the
pivot mount



Mixer Motor Assembly

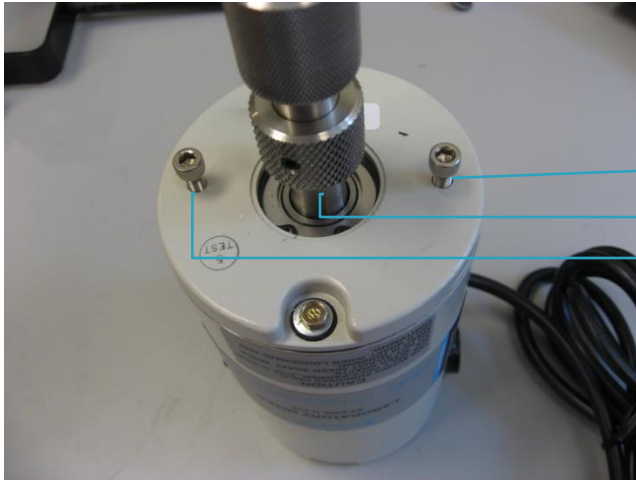

Motor

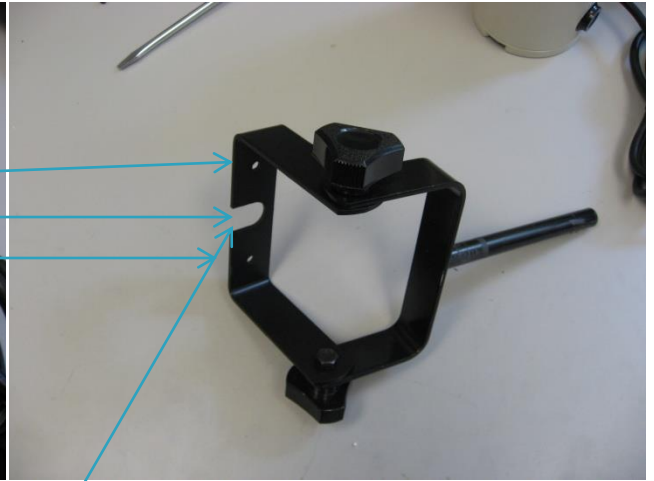


Adjustable Tilt Mount

Attach the mixer motor to the tilt mount using the two bolts on the face of the motor. The shaft rests in the notch of the mount.



Tank Clamp Assembly

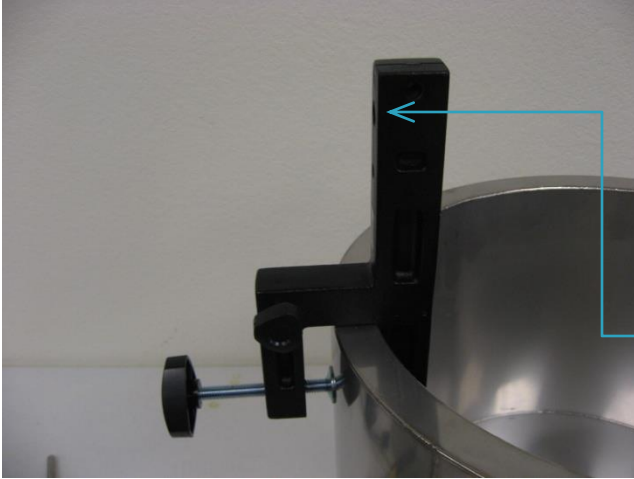


Tank Clamp




Insert shaft of
adjustable tilt
mount in to top
hole of the tank
clamp



Tank Clamp Assembly

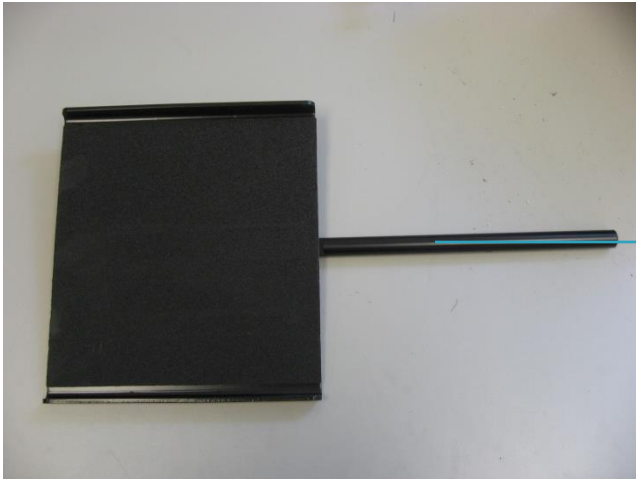

Platform

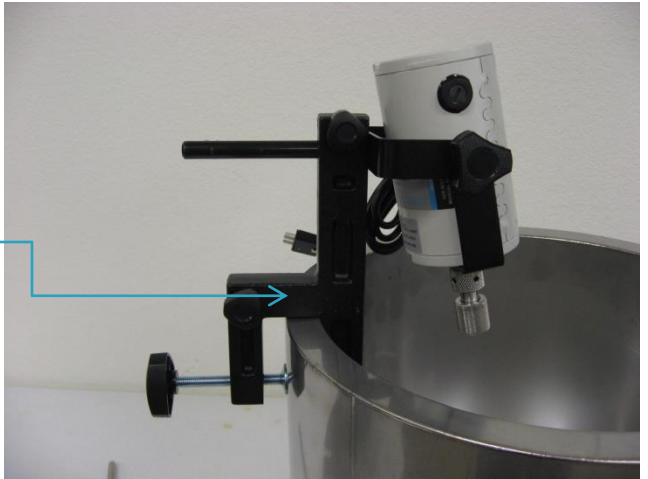


Insert platform
into lower hole of
tank clamp.



Tank Clamp Assembly




Double Rod Clamp

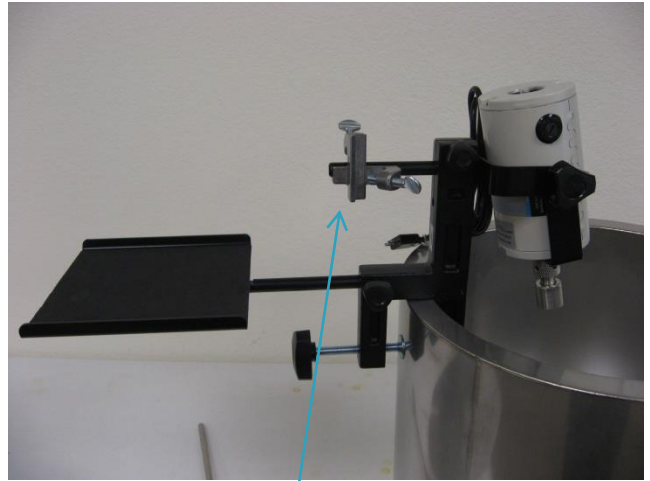

Attach double rod clamp to the shaft of the motor assembly


Insert shaft of controller assembly into the double rod clamp

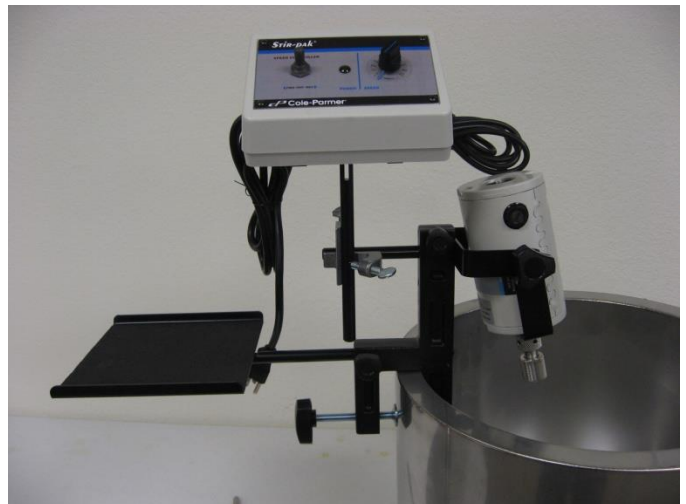

Mixer Shaft Assembly



$\frac{3}{8}$ "
Propeller Shaft

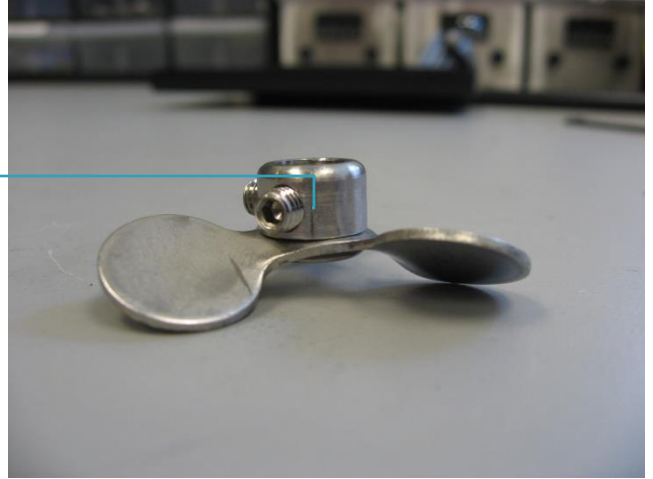

Propeller

Slide the propeller shaft into the chuck on the motor and tighten at the appropriate height

